



Simporo


























Instruções de montagem
Assembly instructions


A

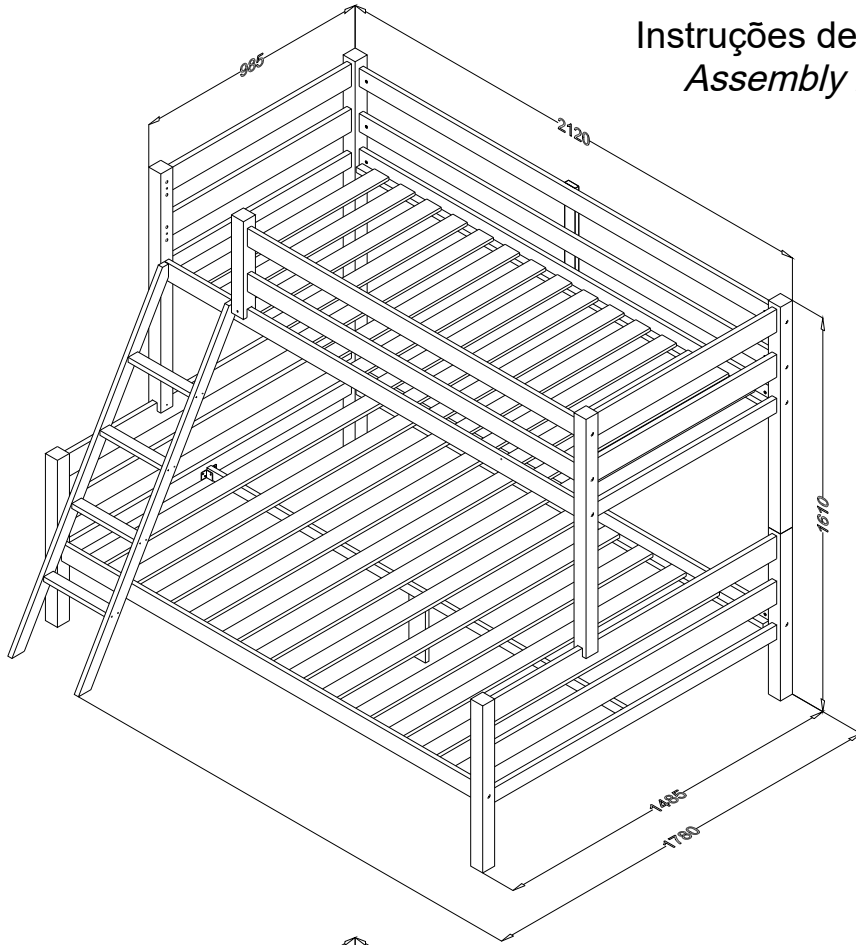

B

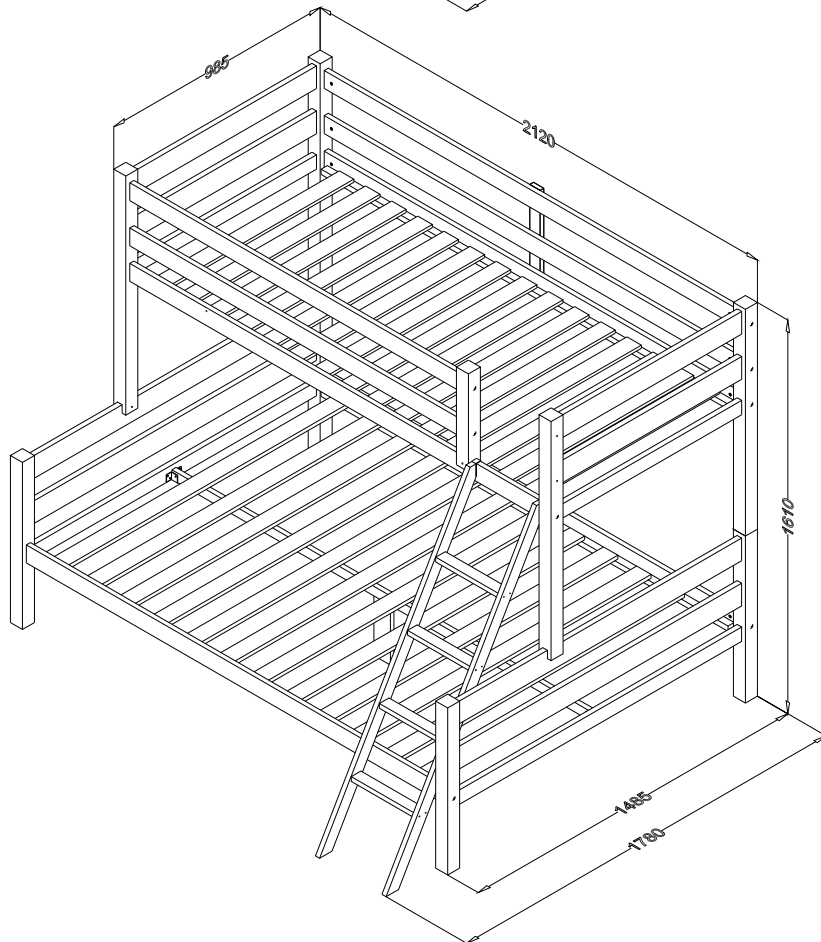

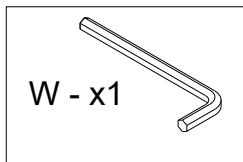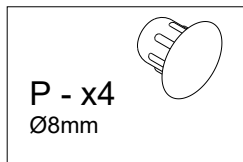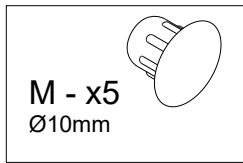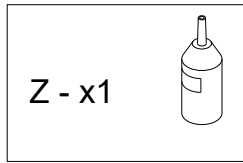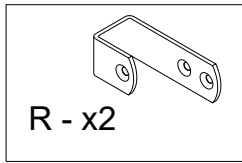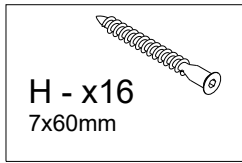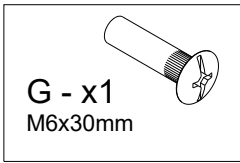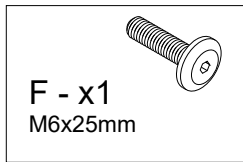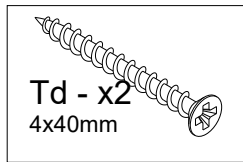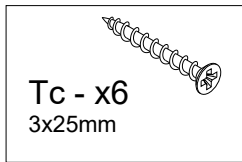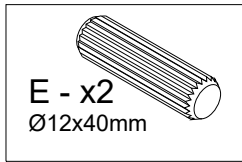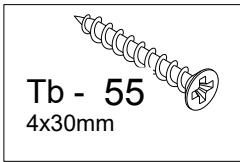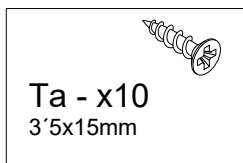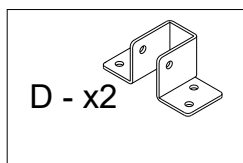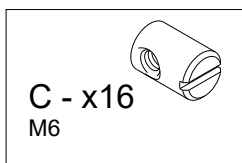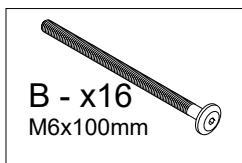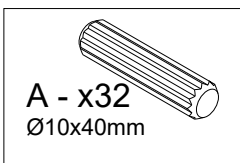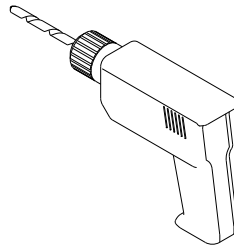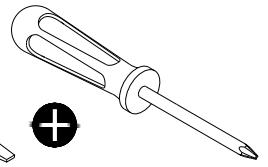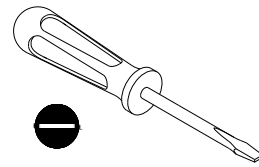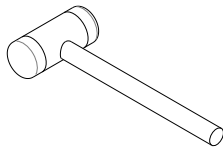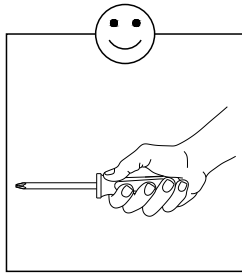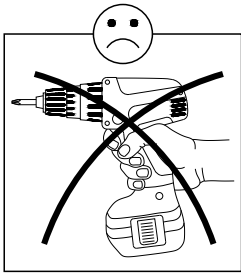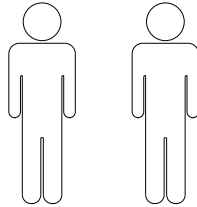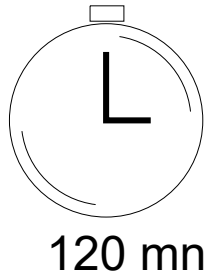

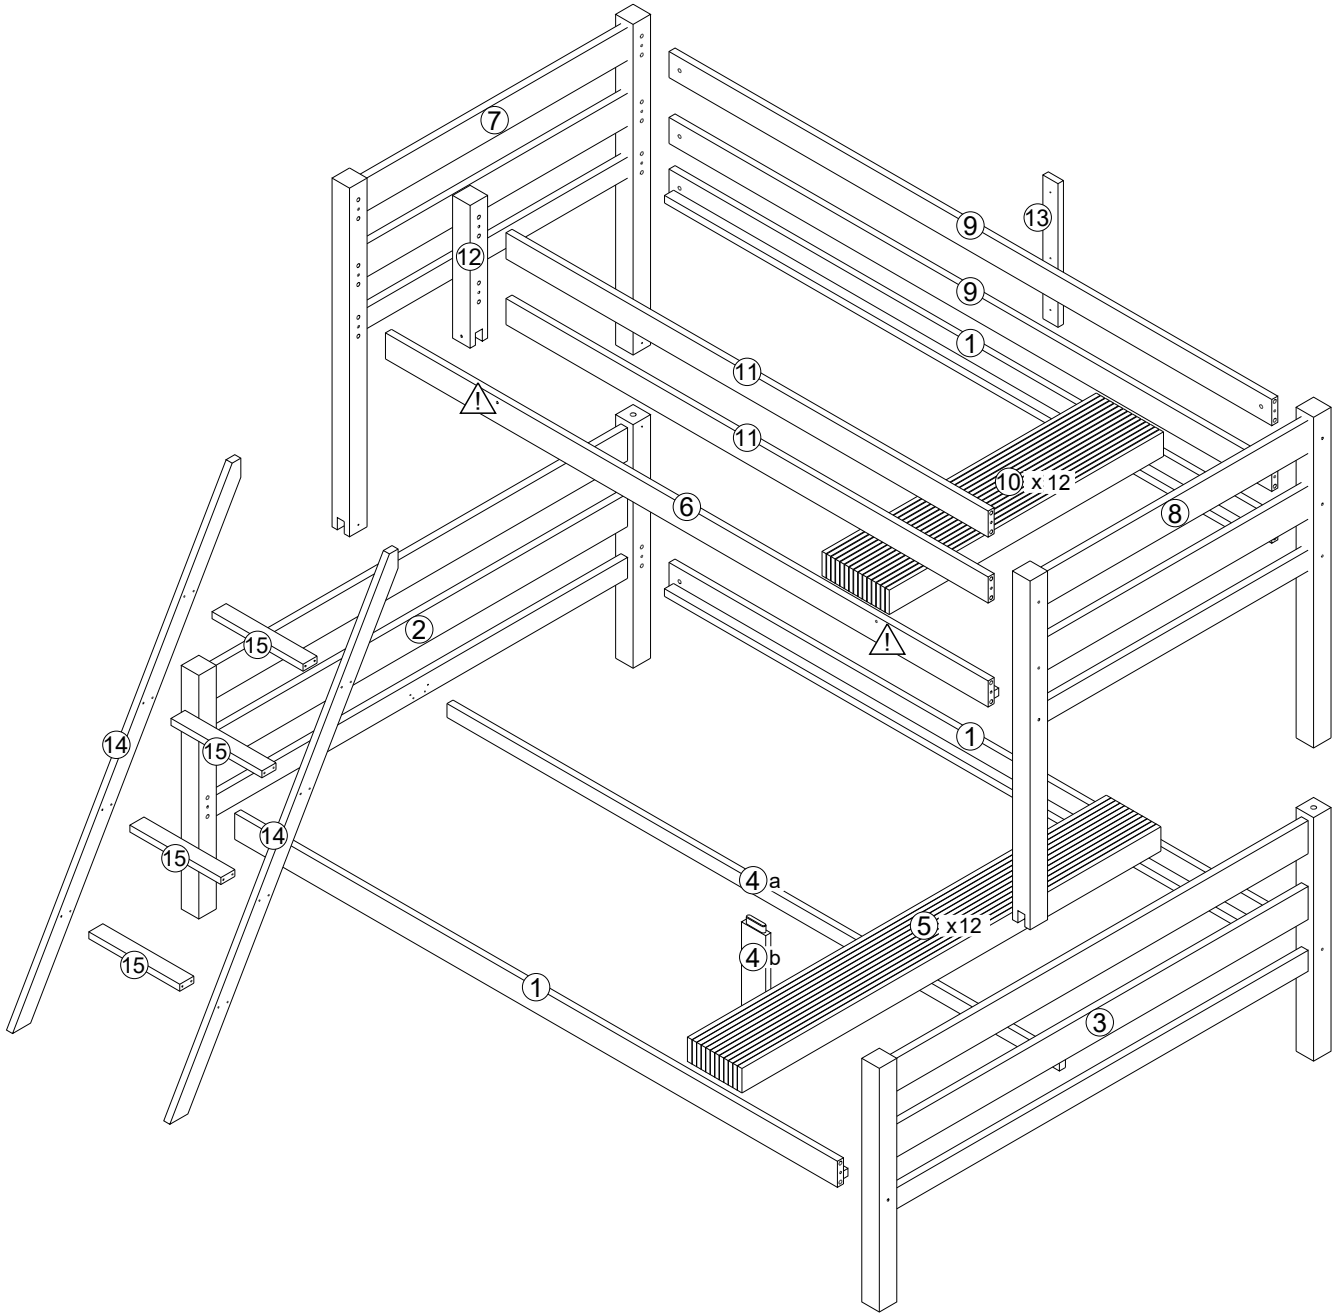






1

2x

A - x8
Ø10x40mm



C - x4
M6

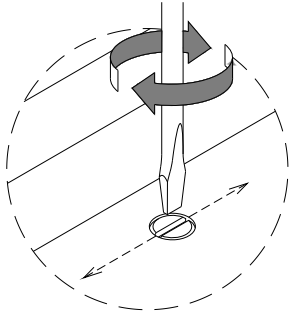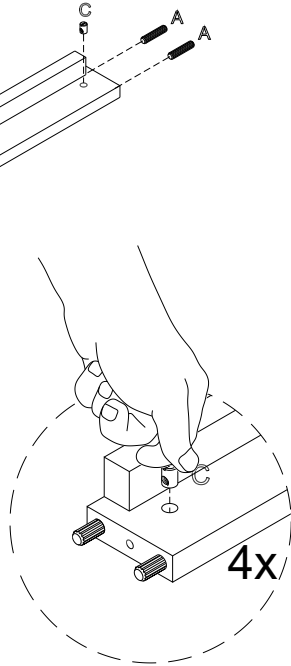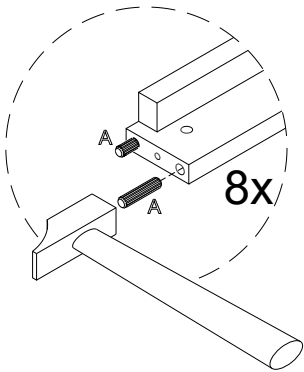


2

D - x2


Ta - x8
3'5x15mm

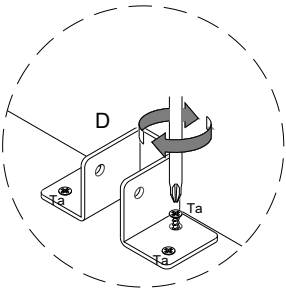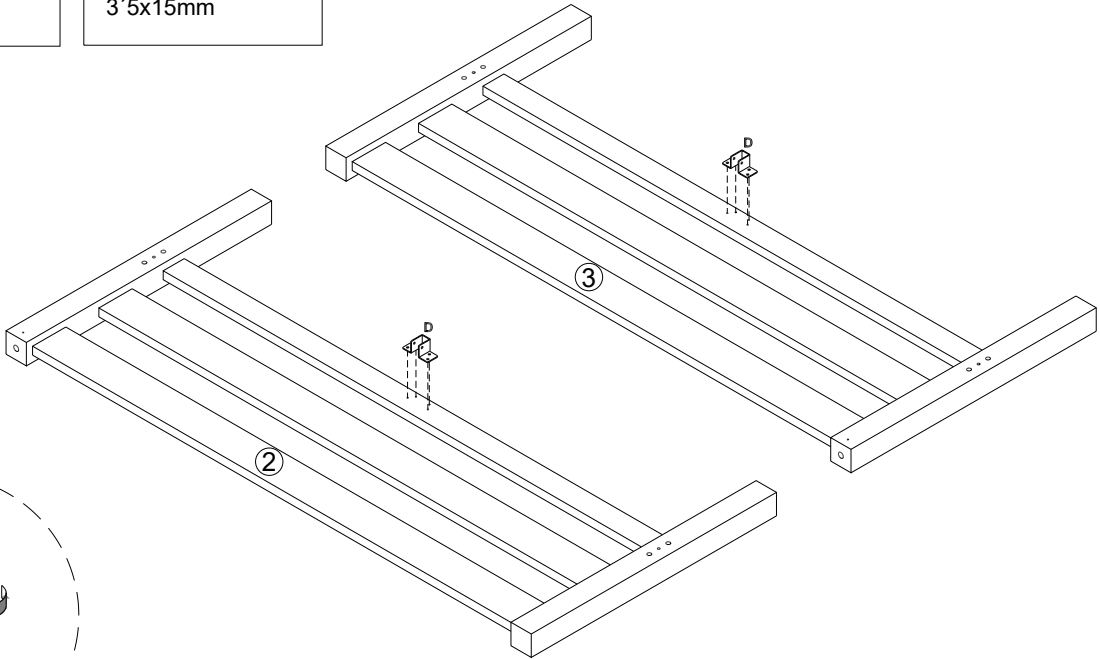



3

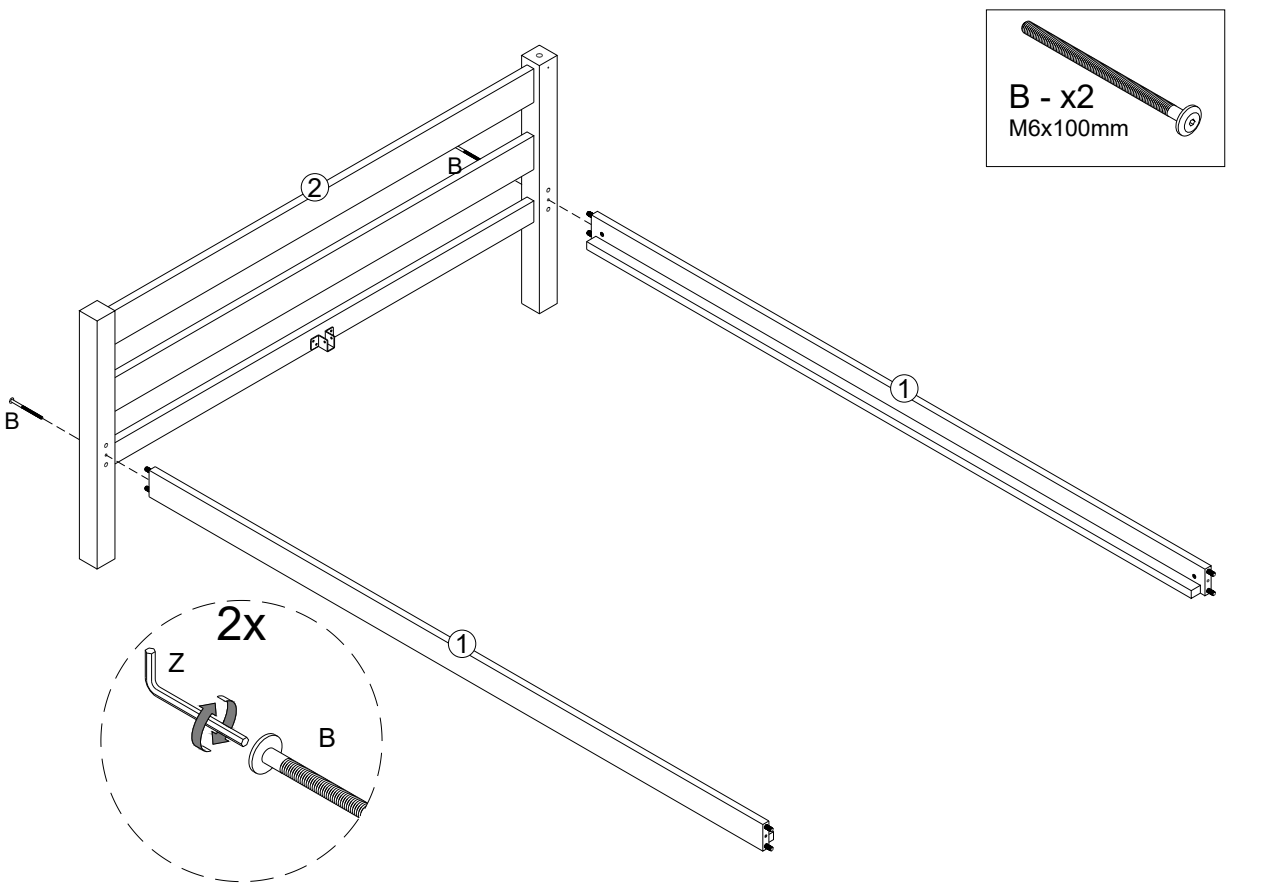



4

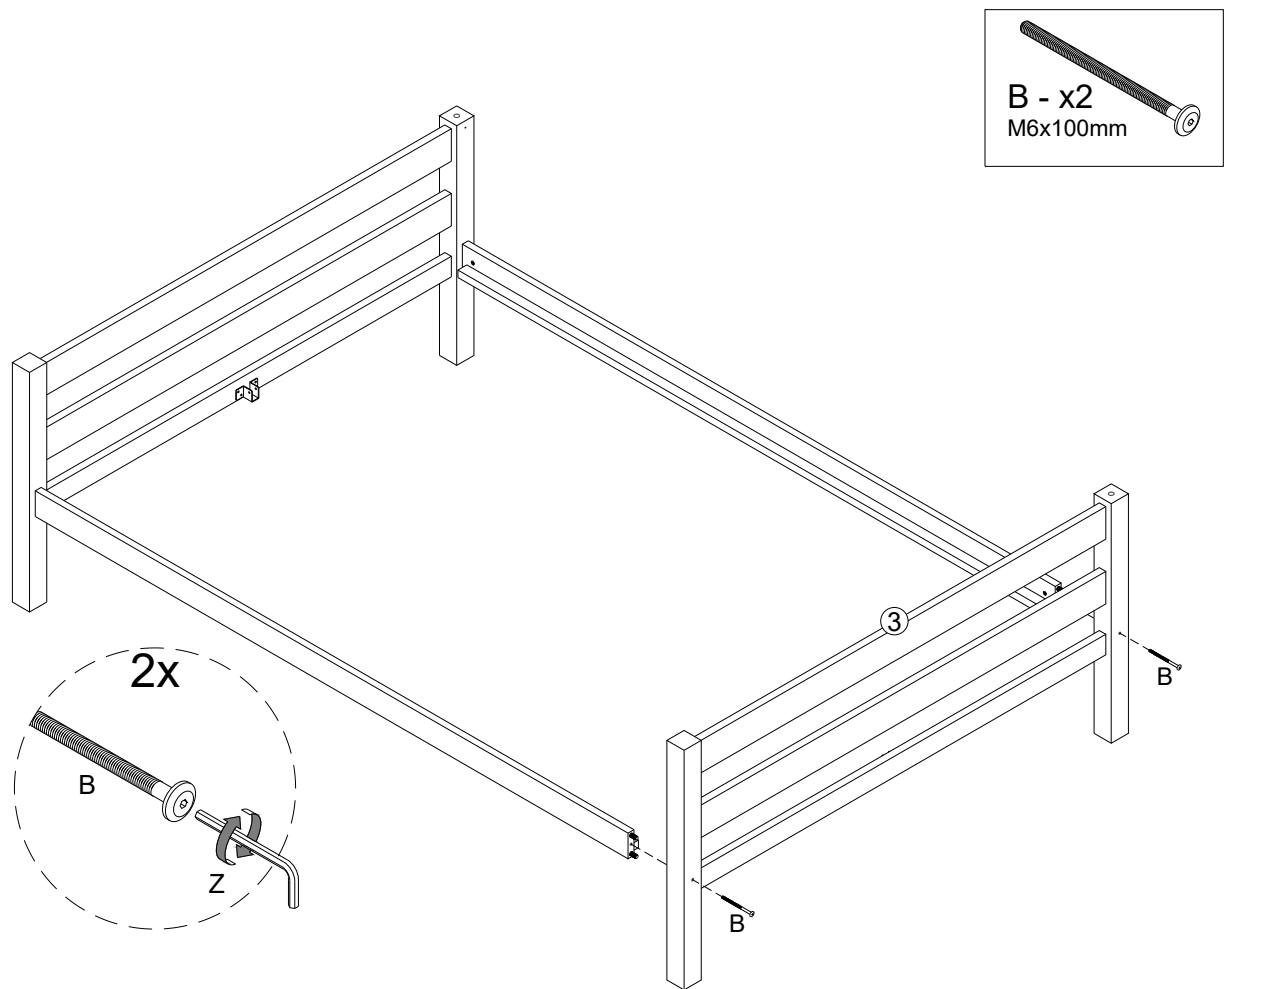

5

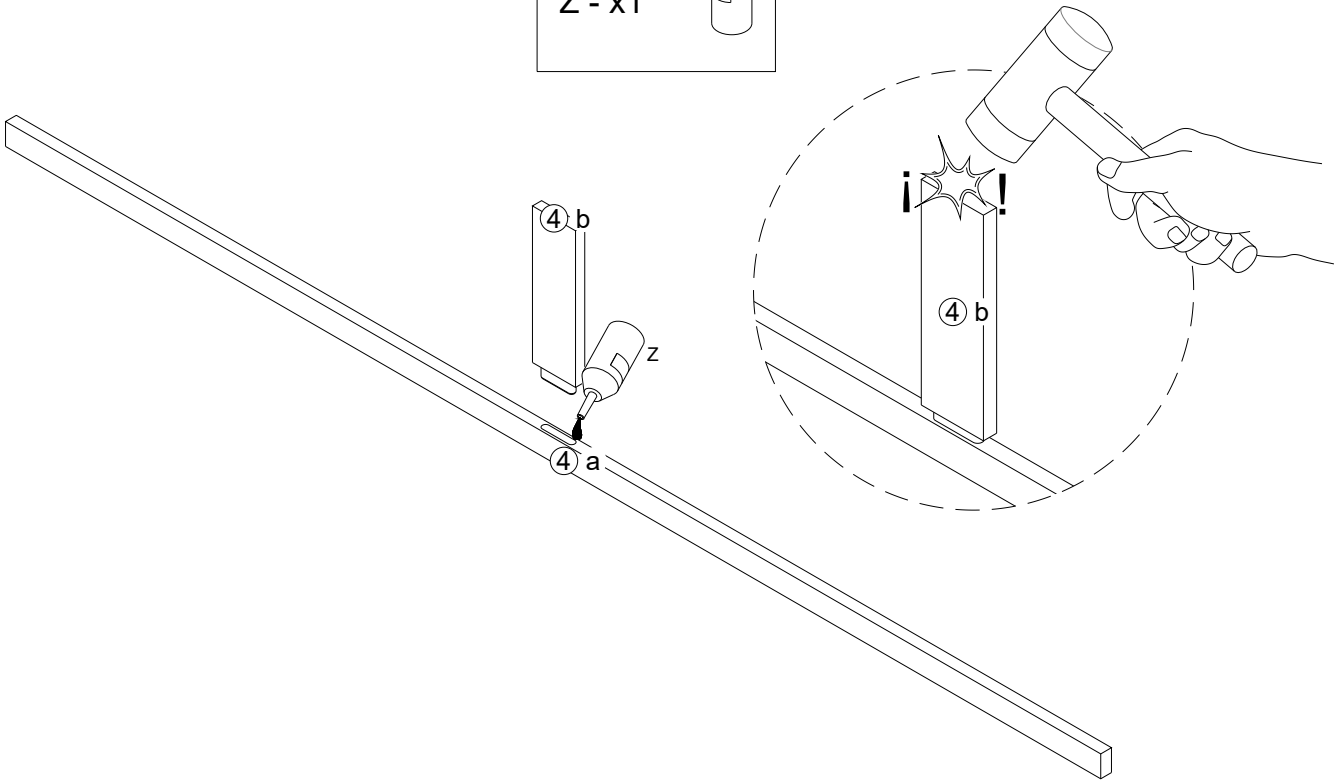
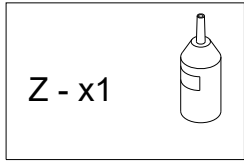


6


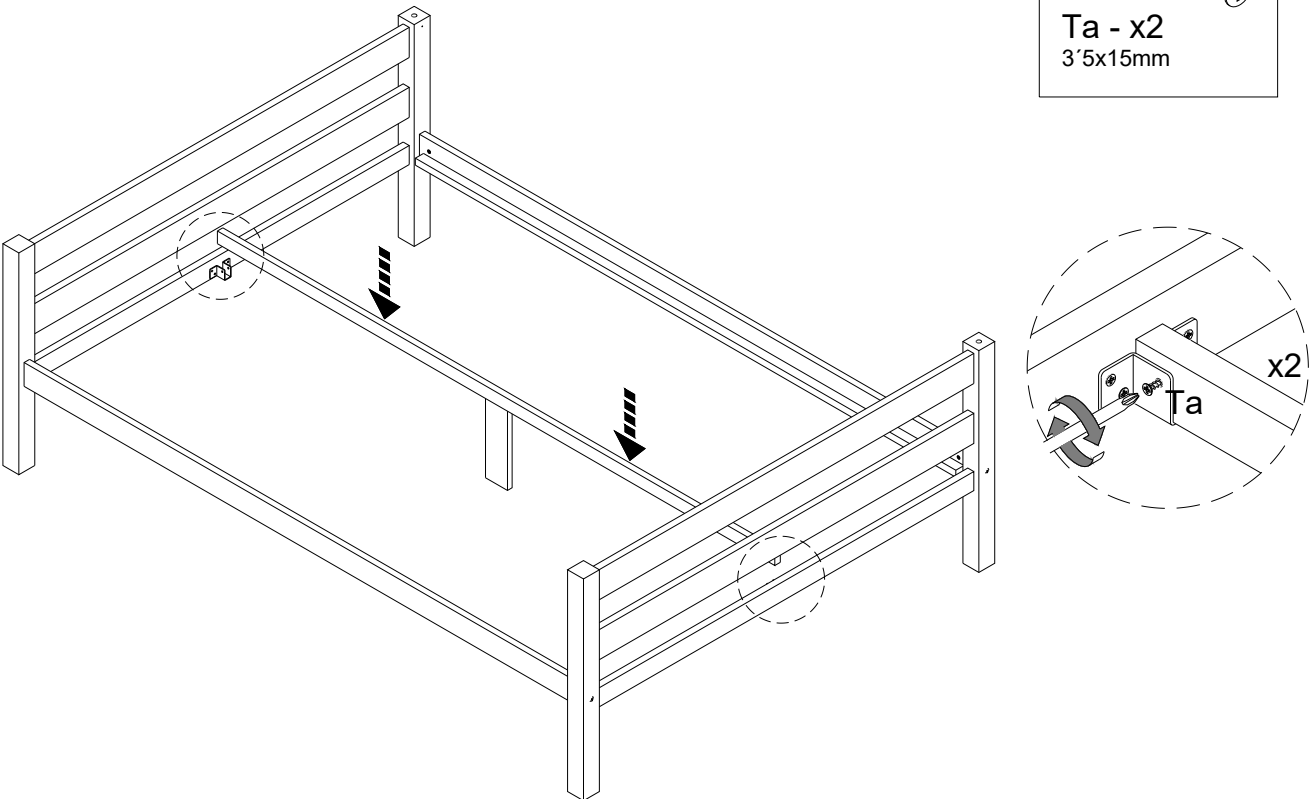
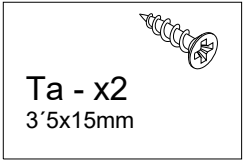


7


12x

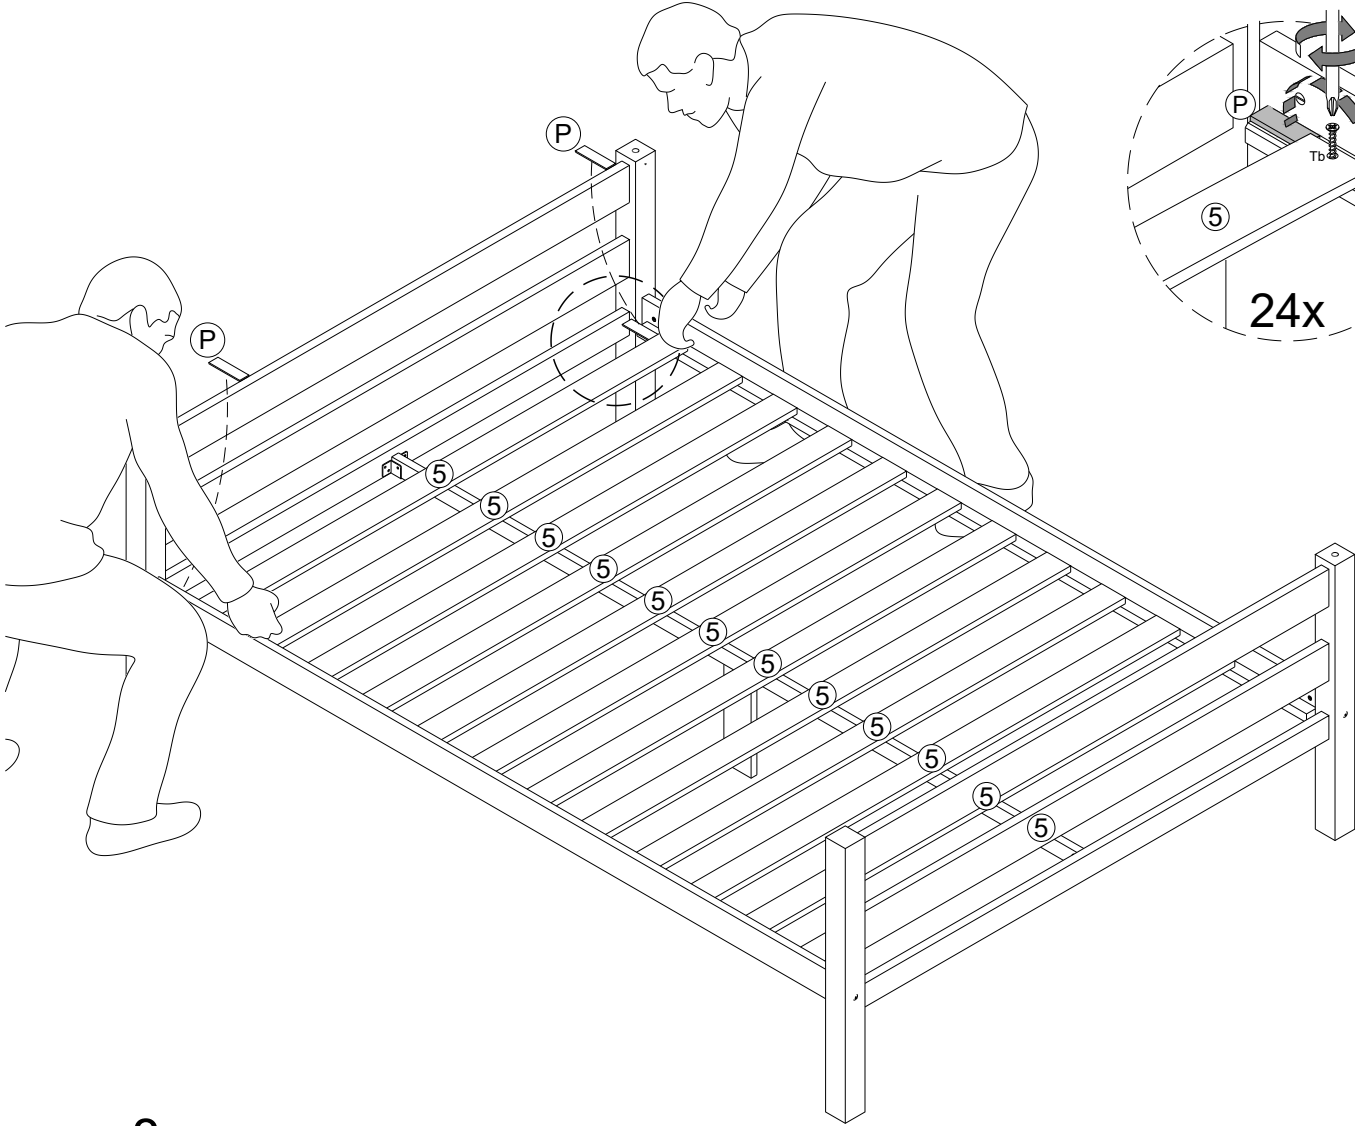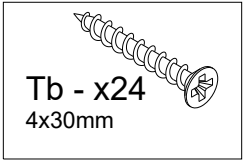


8

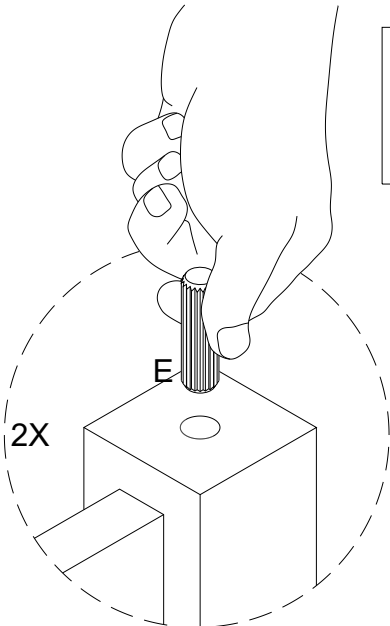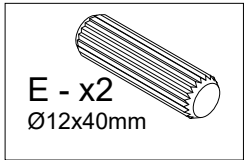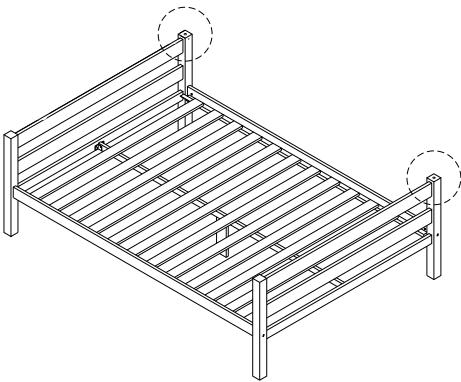


A

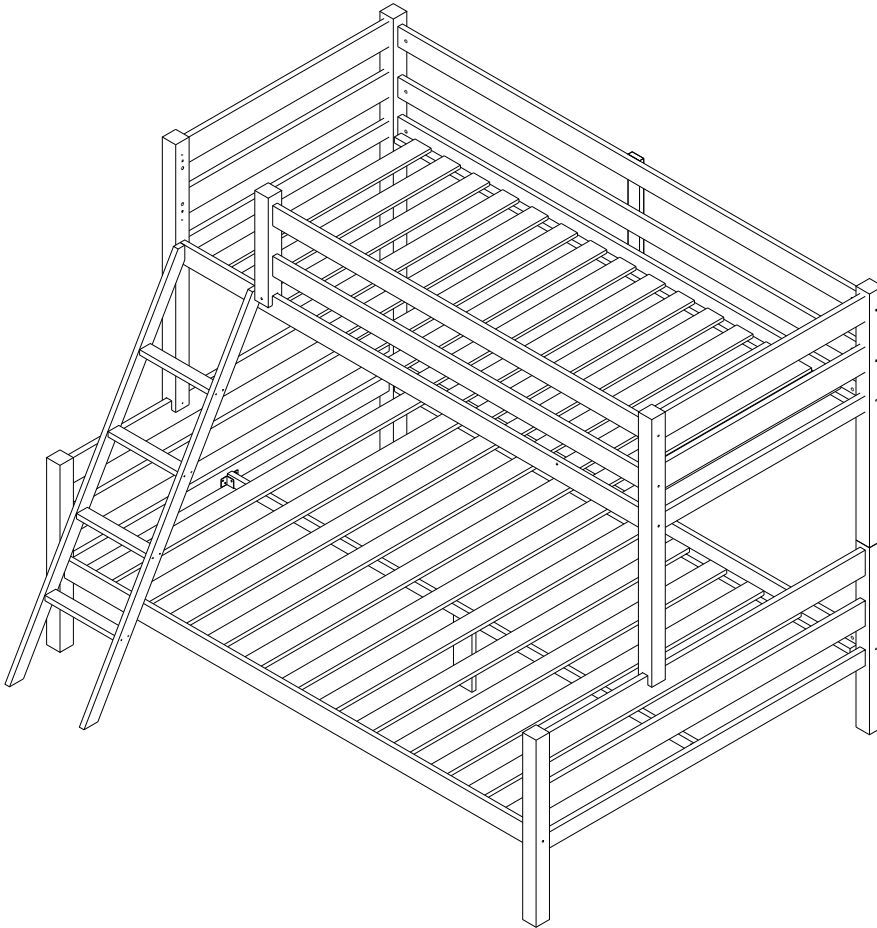


B

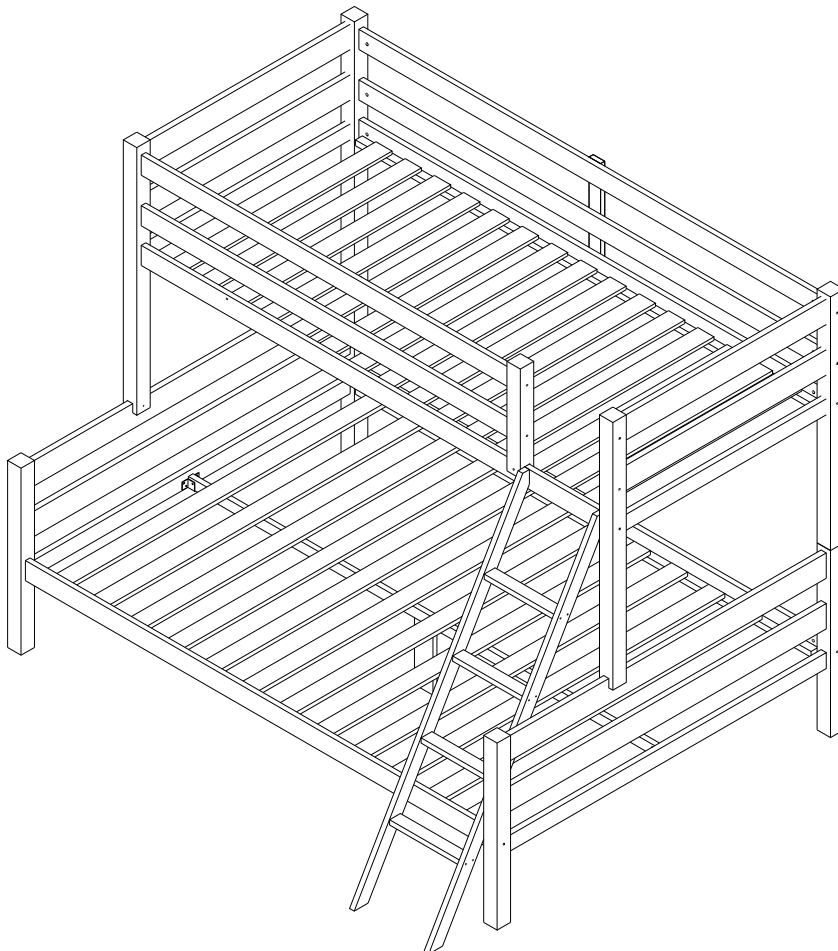

9

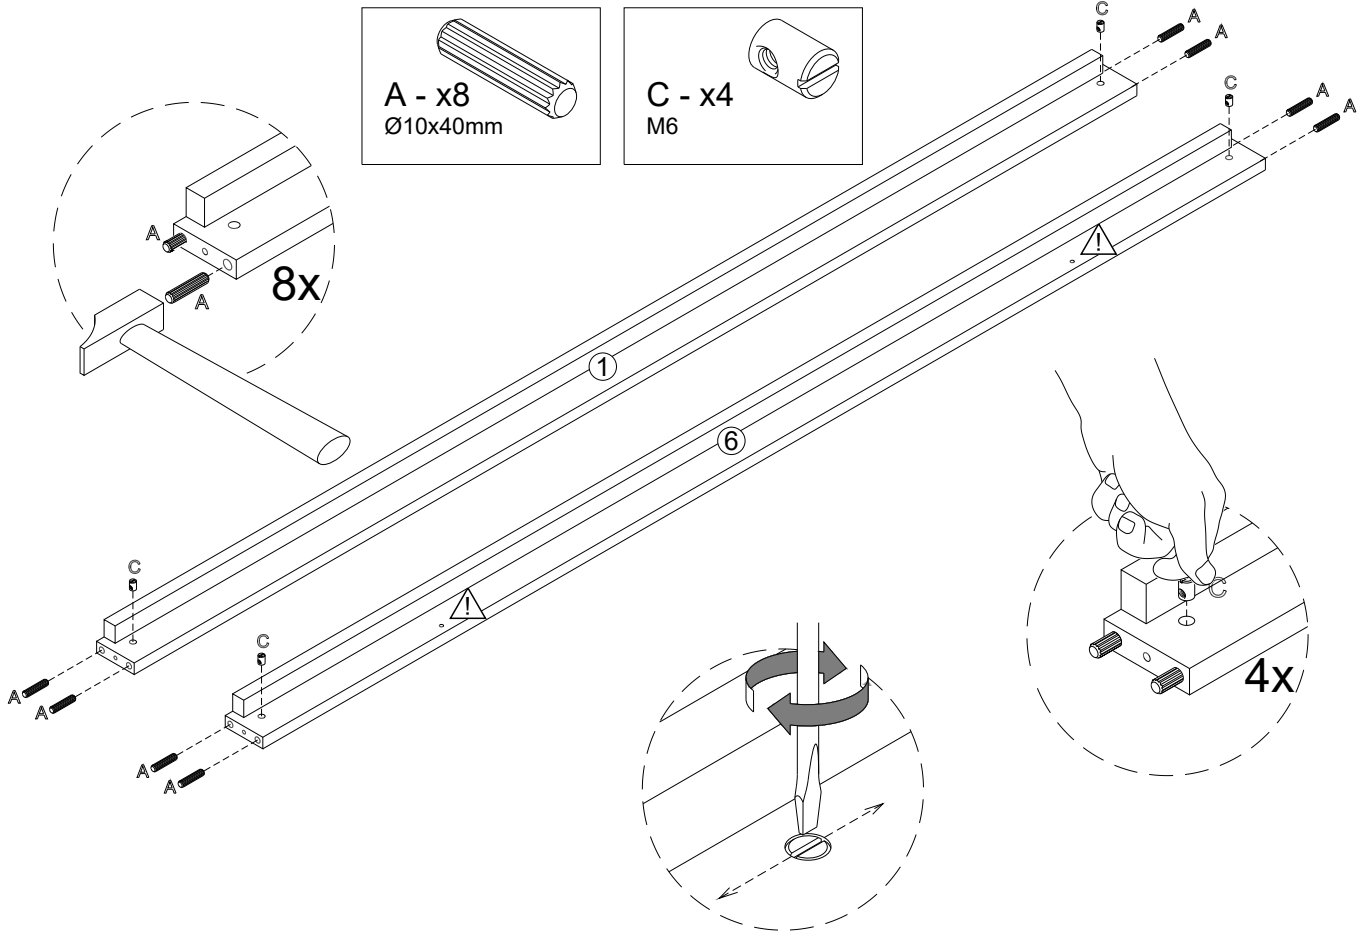


10

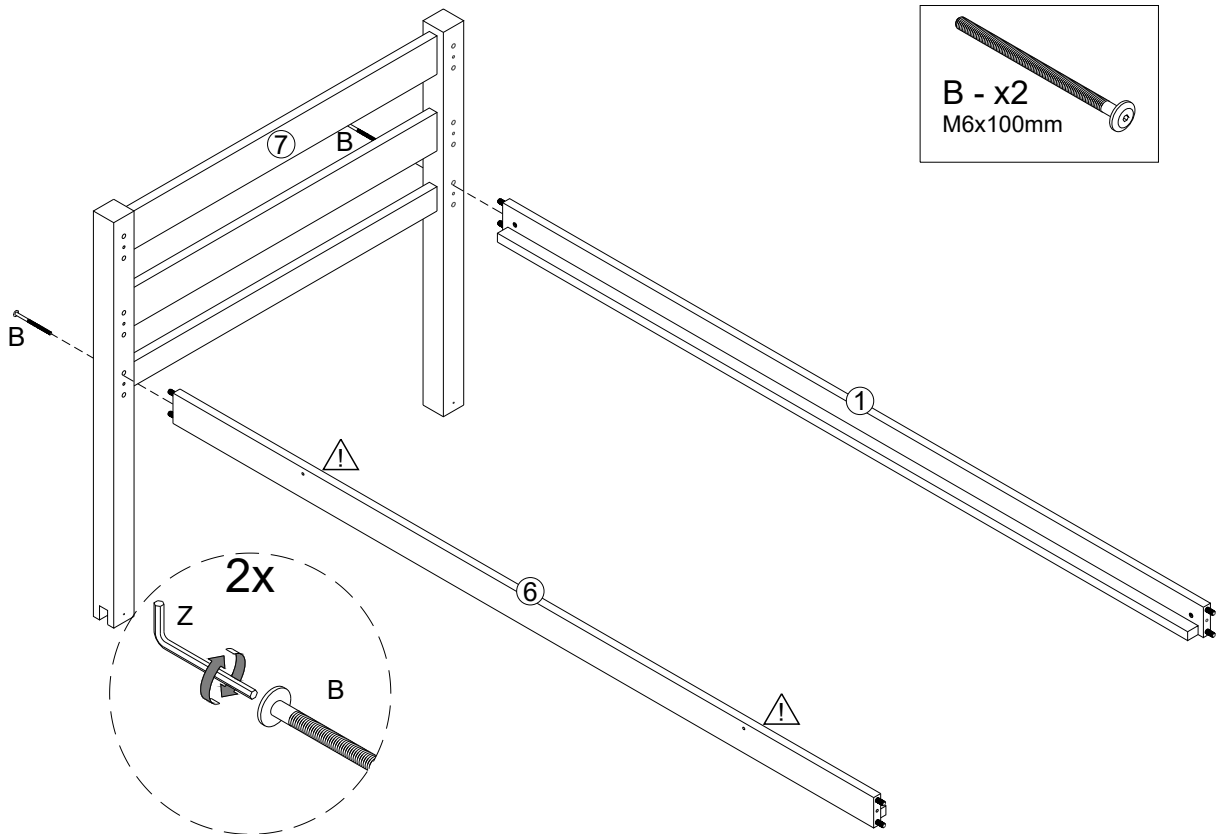






11

2x

A - x8
Ø10x40mm





C - x4
M6

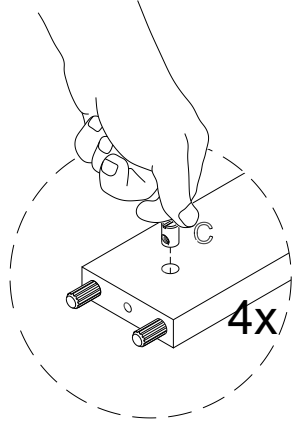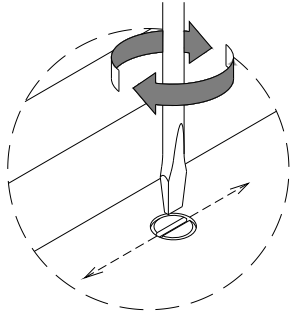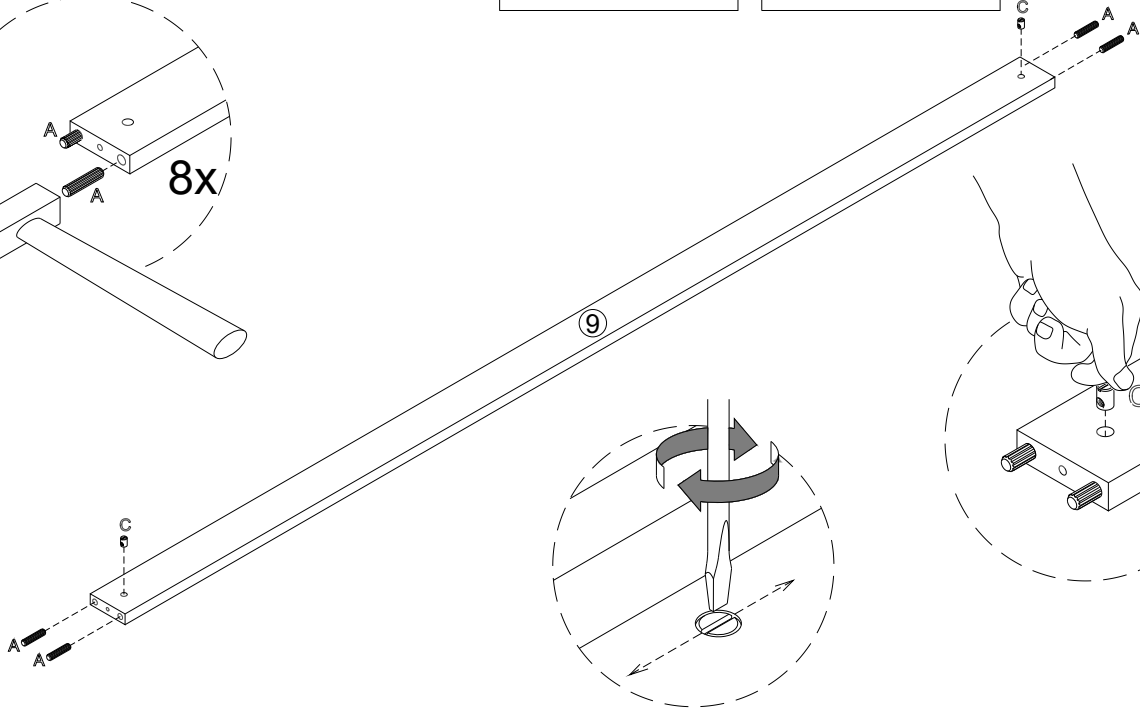
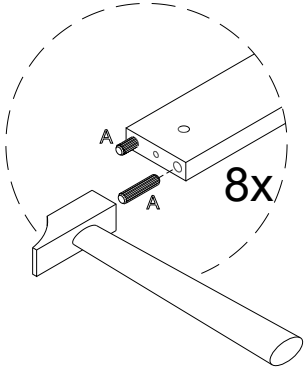



12

B - x2
M6x100mm


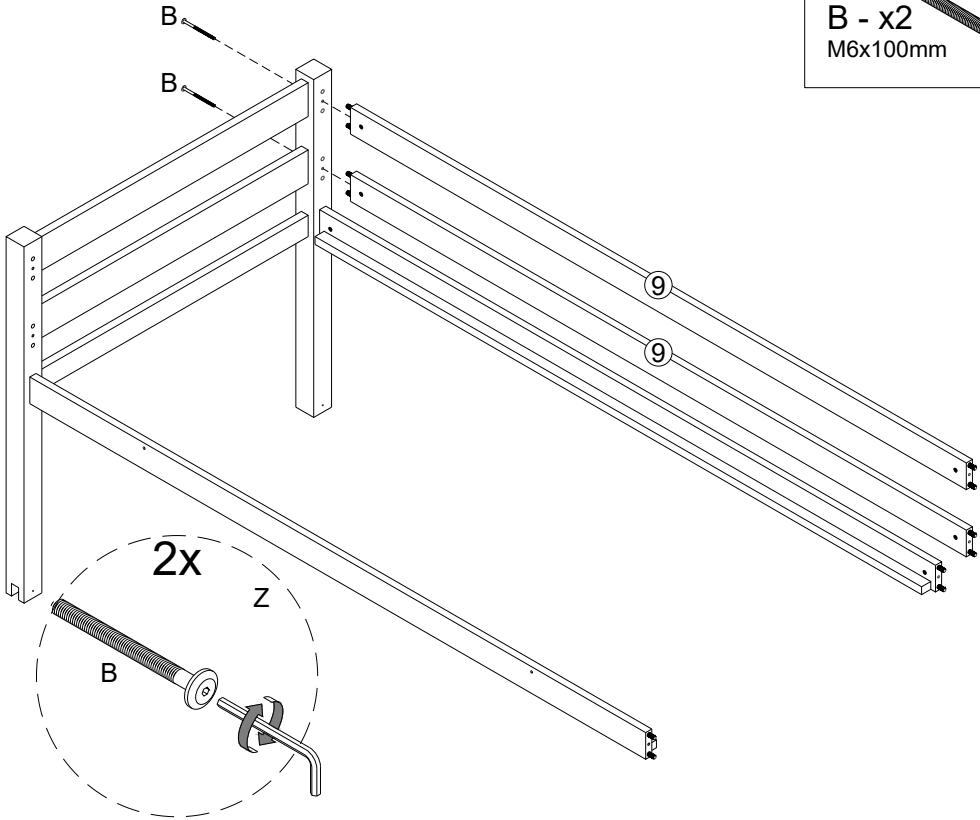
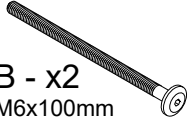


13

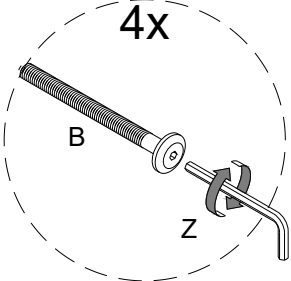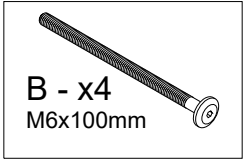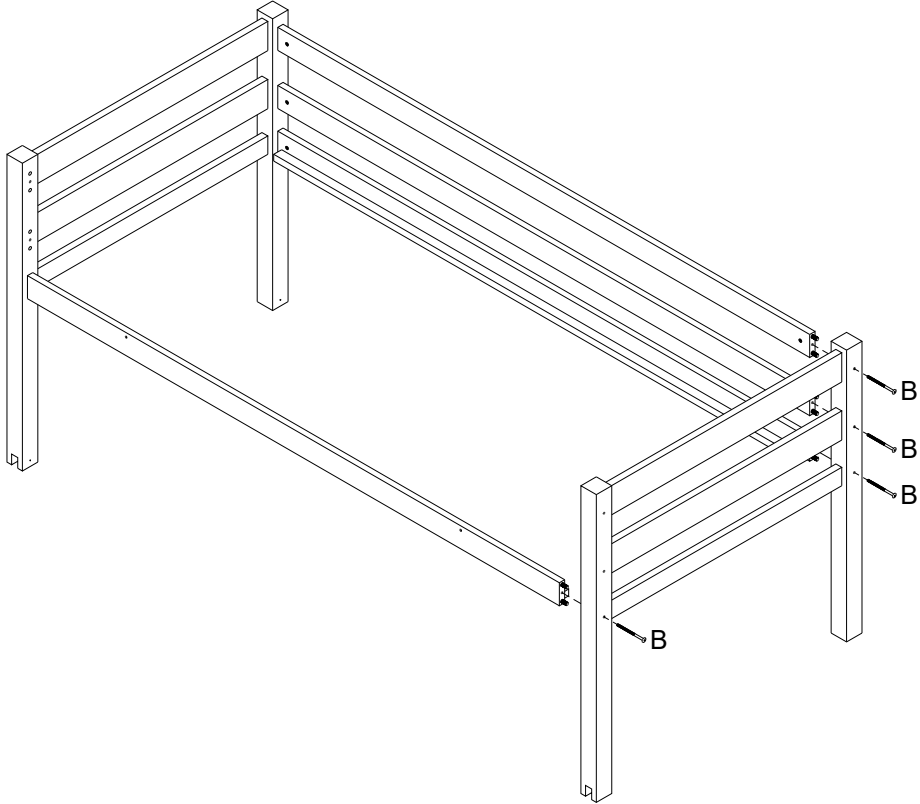


14



2x

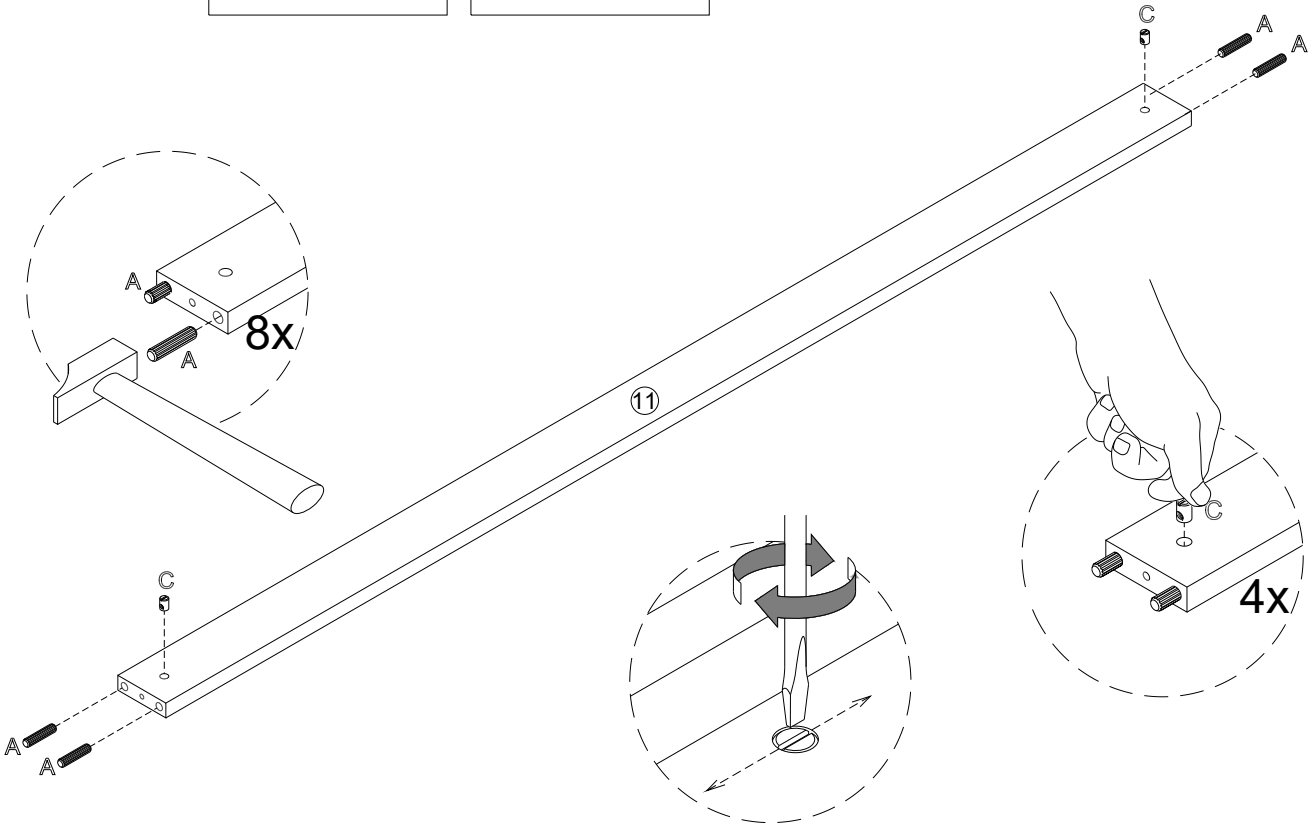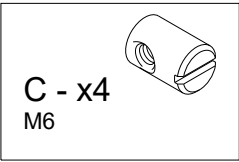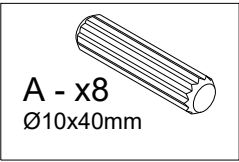

15


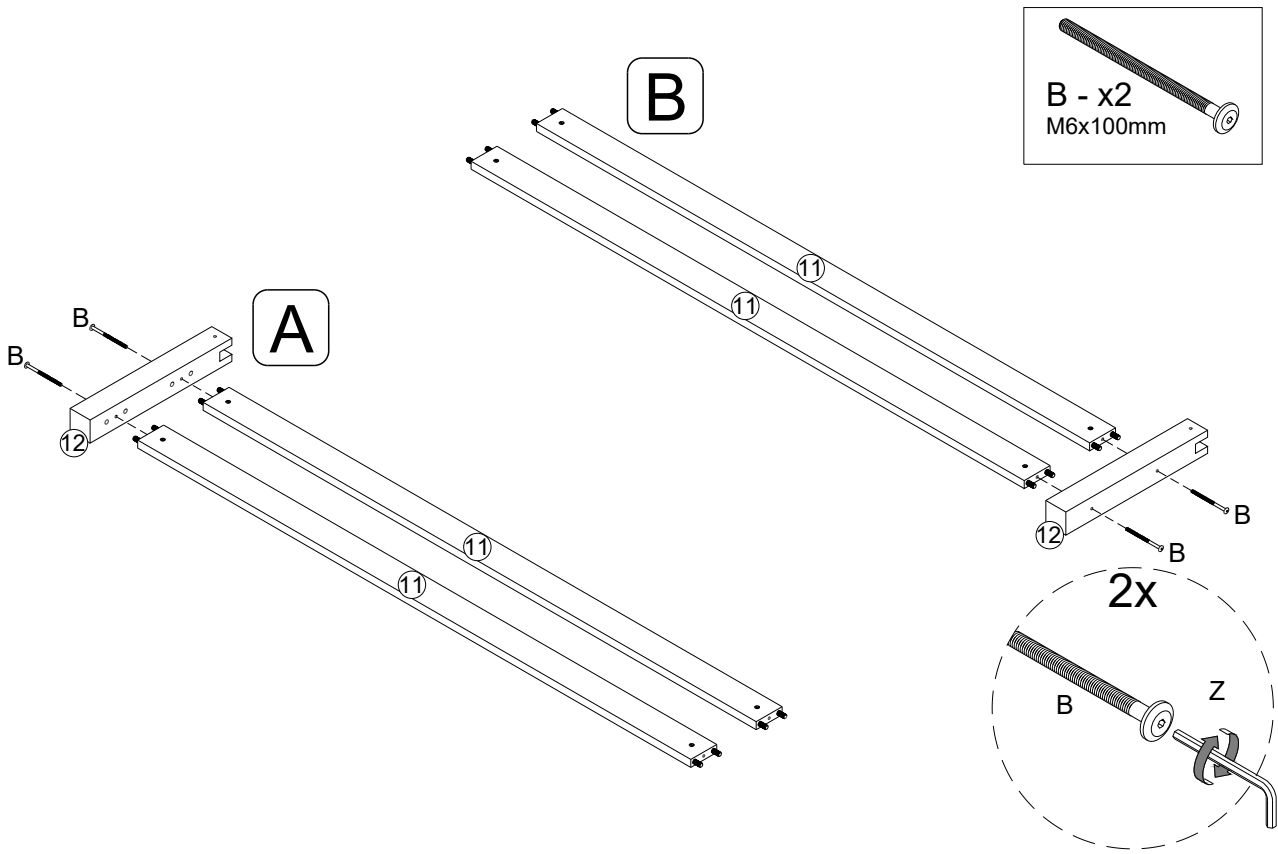


16

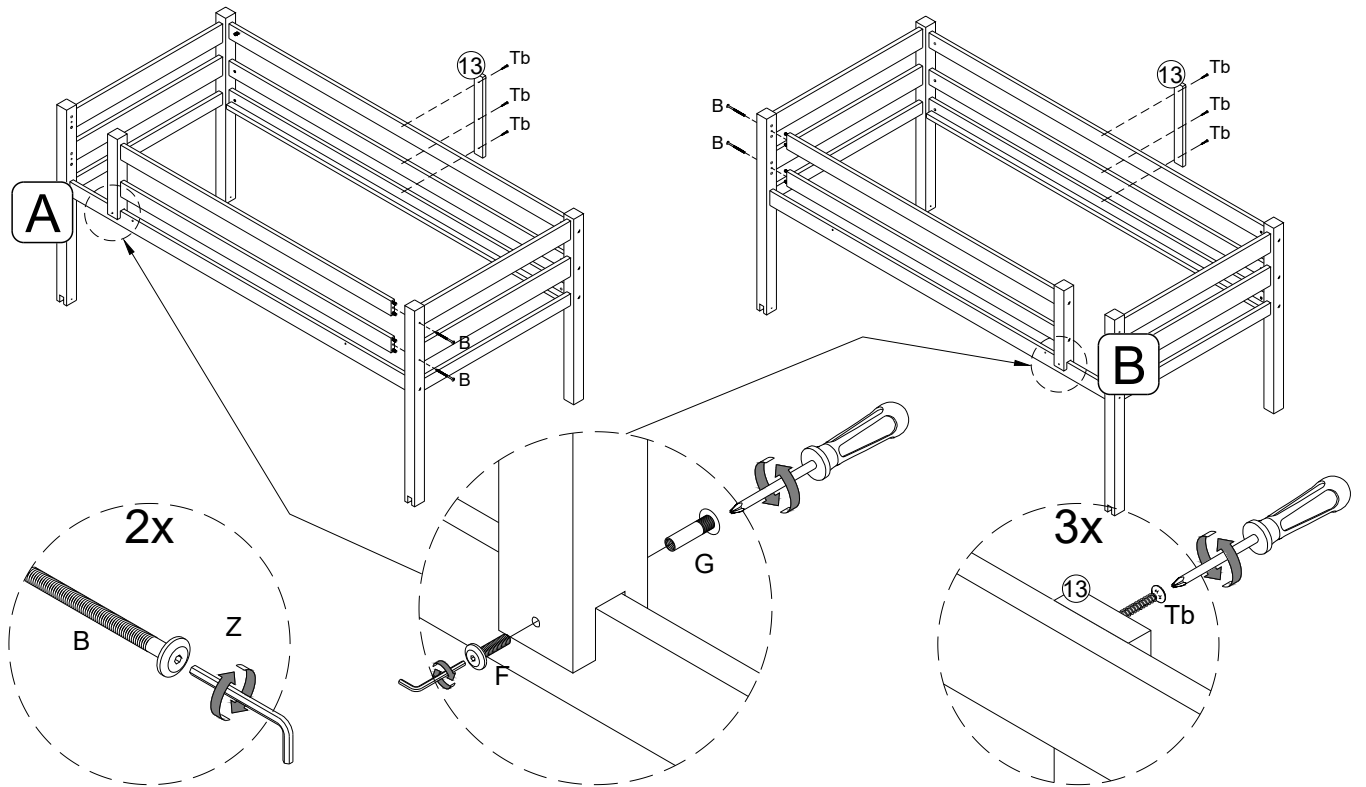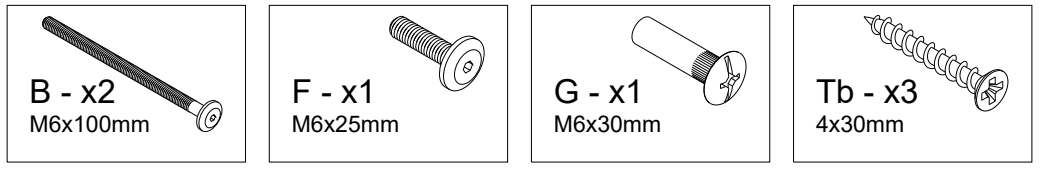






17

15x


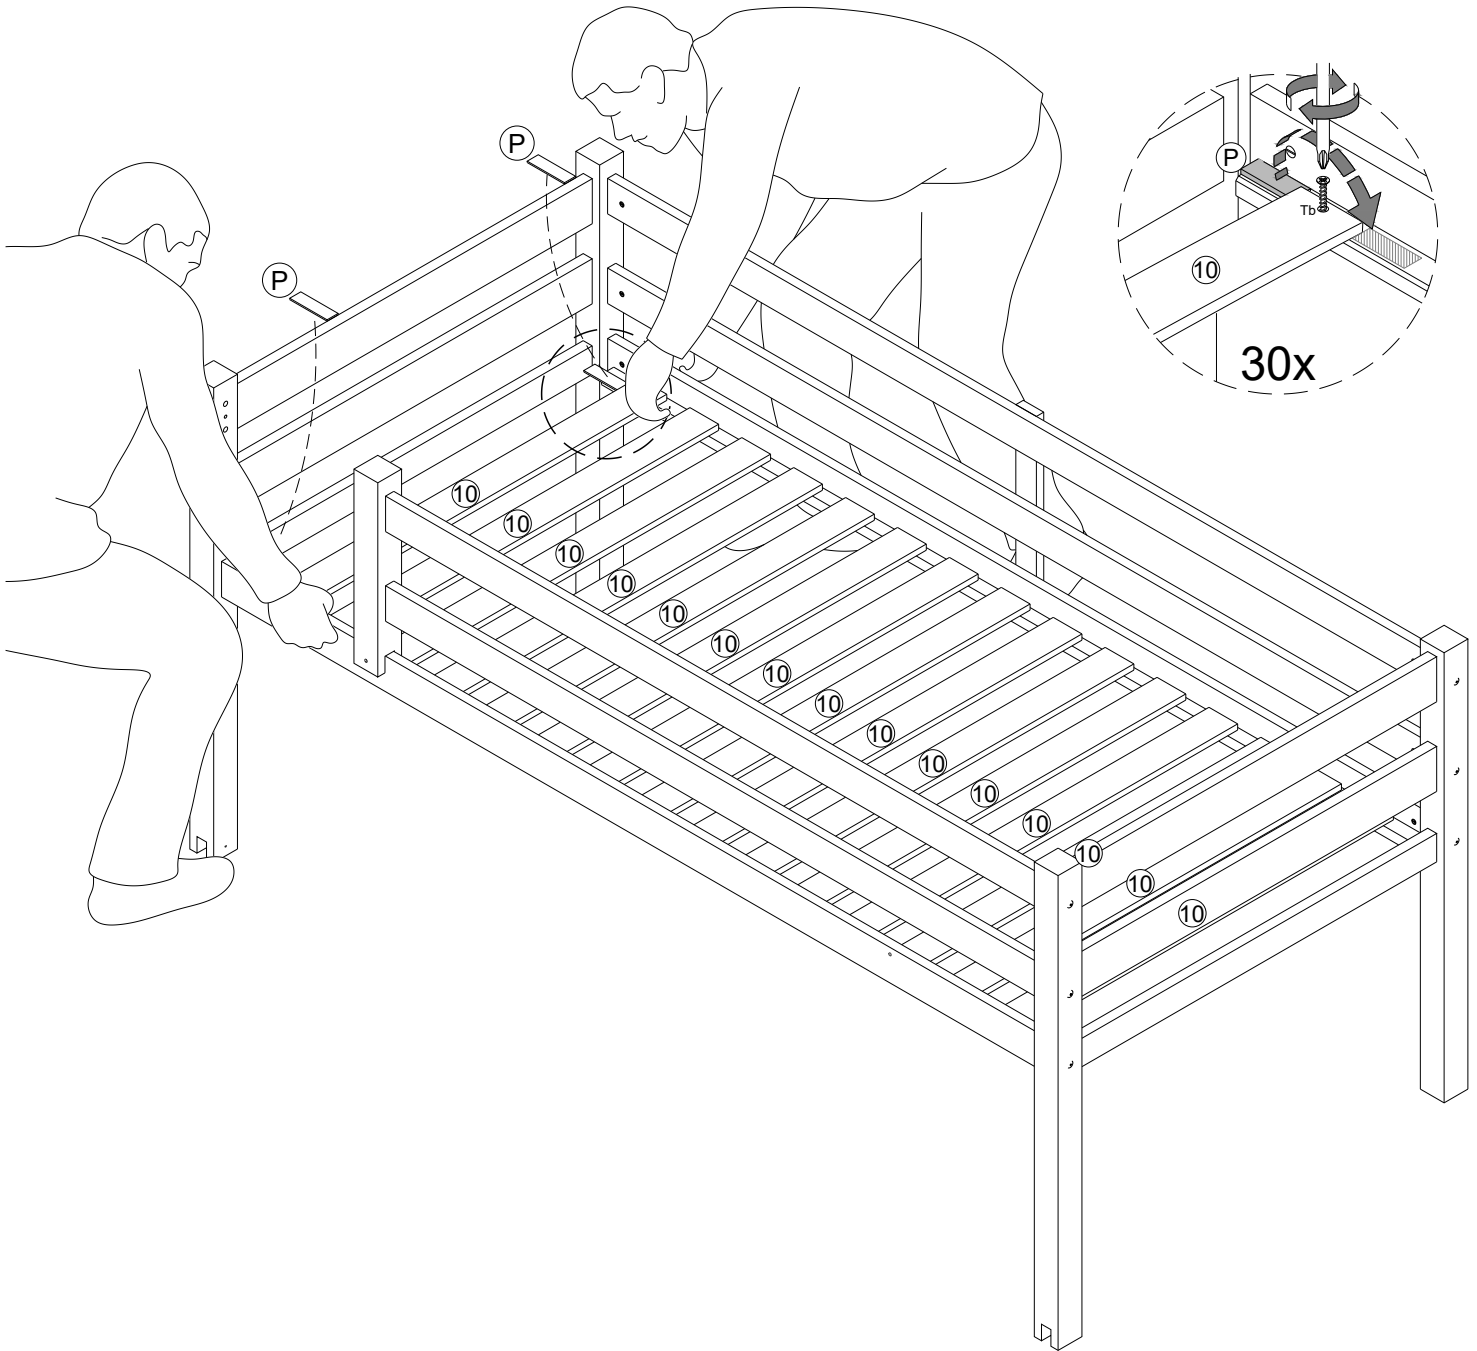
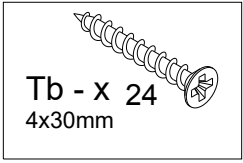








18

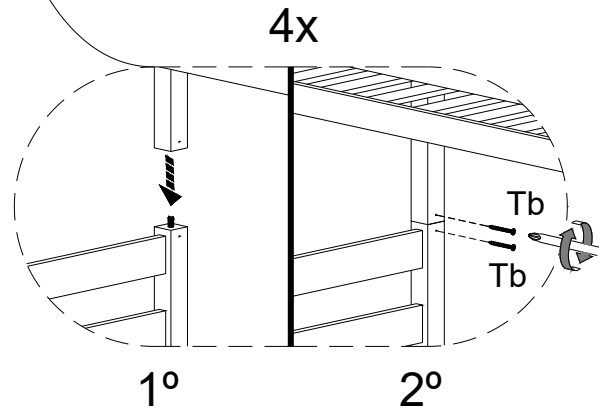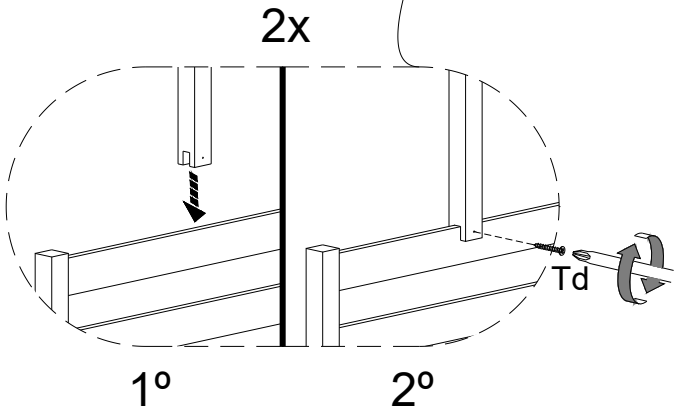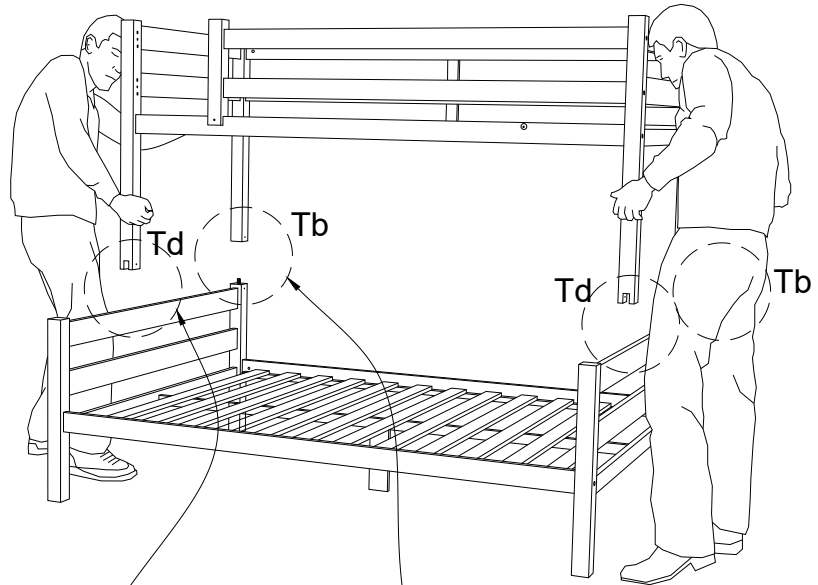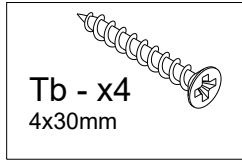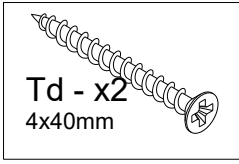

19

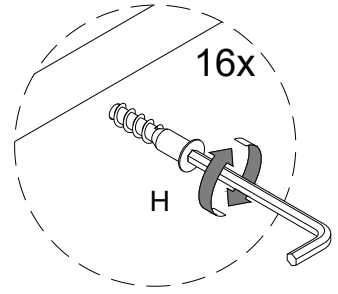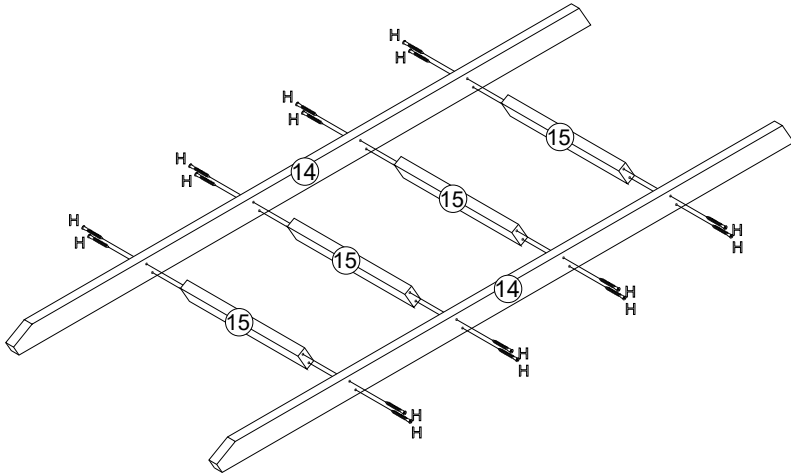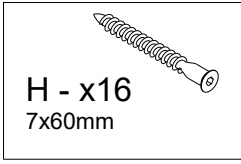

20

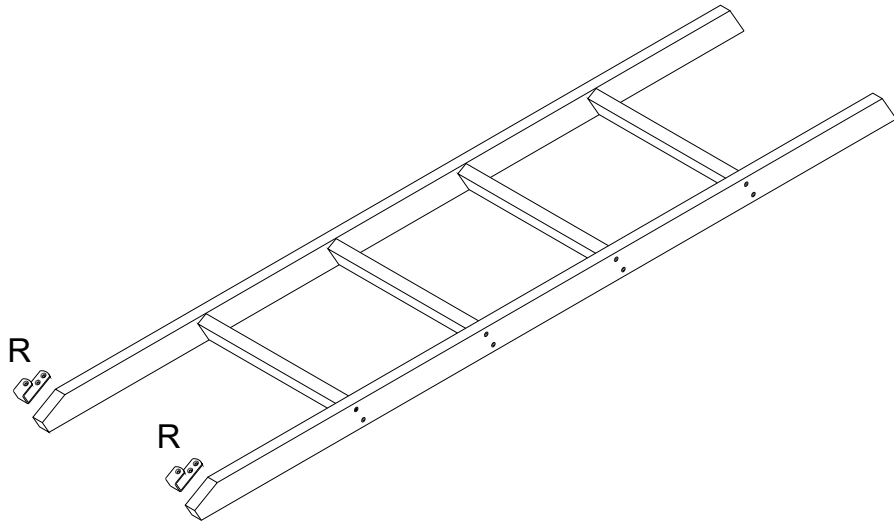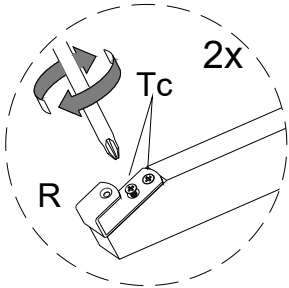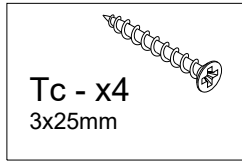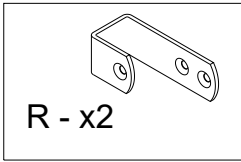

21

